
OA Hood Installation Instructions



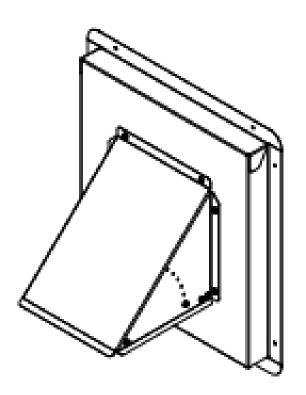

Warnings: Page 2

Hood Installation: Page 3

Large Cabinet Filter Rack: Pages 3-4

Small Cabinet Filter Rack: Pages 5



BE EXTREMELY CAUTIOUS WHEN SCREWING AND INSTALLING PARTS NEAR THE COIL. FAILURE TO DO SO MAY RESULT IN DAMAGE TO THE COIL




WEAR SAFETY GLASSES AND GLOVES WHEN INSTALLING





HOOD INSTALLATION

- 1. Remove the Horizontal Return Air Panel
- 2. Screw on the OA Hood (J)

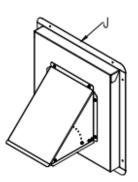


LARGE CABINET FILTER RACK - COMPONENTS

FILTER RACK COMPONENTS:

- (1) A FILTER RACK STAND
- (1) B1- BOTTOM LEFT FILTER RACK
- (1) B2- BOTTOM RIGHT FILTER RACK
- (2) C 1 INCH FILTER ANGLE
- (2) D FILTER RACK SIDE
- (1) E FILTER RACK CENTER
- (1) F1- TOP LEFT FILTER RACK
- (1) F2- TOP RIGHT FILTER RACK
- (2) G LATCH BRACKET
- (2) H FILTER LATCH (2) I 20"x16"x1" NOMINAL FILTER
- (24)- #8x2" TEK SCREWS

OA HOOD COMPONENTS:

- (1) J OA HOOD
- (24)- #8x2" TEK SCREWS
- (2) $-8-32\frac{1}{2}$ Bolts

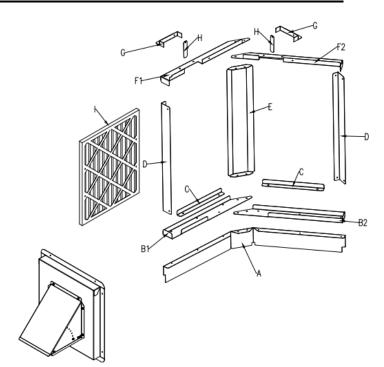



LARGE CABINET FILTER RACK - INSTALLATION

- 1. Remove the Return Air/Condenser Panel from the Unit
- 2. Insert the Assembled Filter Rack Part (A + B1 + B2) into the bottom of the unit.
 - a. For it to fit correctly, ensure that the left side stays in front of the pan wall and the right side goes behind the pan wall.
- 3. Overlap the Top Filter Racks (F1 + F2). The Left Filter Rack should be on top. Align the two holes with the Filter Rack Center (E). Screw together.
- 4. Attach the Filter Rack Sides (D) onto the inside of the assembled Top Filter Rack Part (F1 + E+F2)
 - a. Left Side Screw through Back Flange
 - b. Right Side Screw through Side Flange
- 5. Insert Assembled Part into Unit. Filter Rack Sides (D) should be lined up on the inside of the Bottom Filter Rack Assembly (A + B1 + B2)
 - * Be cautious of the coil when inserting the assembled part into the unit *
- 6. Screw the Filter Rack Center (E) to the Bottom Filter Rack Assembly (A + B1 + B2)
- 7. Screw the Filter Rack Sides (D) to the Bottom Filter Rack Assembly (A + B1 + B2)
 - a. Left Side Screw through Back Flange
 - b. Right Side Screw through Side Flange
- 8. Insert Filters (I) and secure them using the Filter Latches (H)
- 9. Re-Install the Return Air/Condenser Panel
 - 2 INCH FILTER MODIFICATION:


IF USING 2 INCH FILTERS—
PARTS F1 & F2 MOVE (H) FILTER LATCH TO 2ND SET OF HOLES.
PARTS B1 & B2 REMOVE (C) 1 INCH FILTER ANGLES.







SMALL CABINET FILTER RACK - COMPONENTS

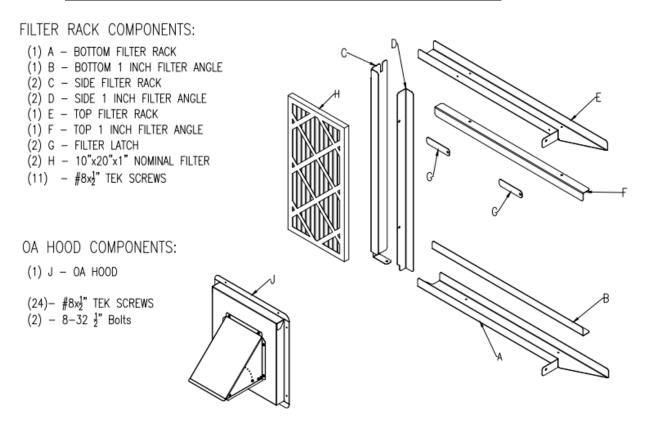

SMALL CABINET FILTER RACK – INSTALLATION

- 1. Detach Return Air/Condenser Panel
- 2. Install Top Filter Rack (E)
- 3. Install Bottom and Side Filter Rack (A, B + C, D)
- 4. Install Filters (H) and secure them using the Filter Latches (G)

2 INCH FILTER MODIFICATION:

IF USING 2 INCH FILTERS—
PART A REMOVE B 1 INCH FILTER ANGLE.
PART C REMOVE D 1 INCH FILTER ANGLE.
PART E REMOVE F 1 INCH FILTER ANGLE.
ROTATE BOTH G FILTER LATCHES DOWN INTO POSITION.

